

AUDIO SYSTEM USE INSTRUCTIONS DAKOTA LODGE

ALL SYSTEMS

MASTER SWITCH (located in the top right corner of the audio panel)

1. Turn the MASTER power switch to the ON position. When in the ON position, the switch will illuminate.

TOA AMPLIFIER (the amplifier is the bottom audio component)

1. The green LED power light on the TOA AMPLIFIER should be illuminated. If not, press the amplifier power switch (located on the bottom right of the amplifier). The LED light will turn on.
2. The white indicator line on the INPUT VOLUME CONTROLS #1-8 should each point to the green dot on the respective dial.
3. The TONE DEFEAT switch activates or deactivates the treble and bass control knobs. To manually control the TREBLE and BASS with the control knobs, the TONE SWITCH should be turned OFF.
4. The MASTER volume control knob adjusts overall volume. This volume control knob should point to the green dot on the respective dial. This control knob can be adjusted based on desired volume.
 - a. A volume control knob is also located on the north wall of the great room (to the left of the terrace doors).

WIRELESS MICROPHONE (TOA DIVERSITY WIRELESS TUNER)

1. The display on the TOA DIVERSITY WIRELESS TUNER should be illuminated. If not, press the tuner power switch (switch is located on the right side of component). The power indicator light will turn on.
2. Set the microphone switch (on the wireless microphone) to the ON position.

LAPEL MICROPHONE (TOA DIVERSITY WIRELESS TUNER)

1. The display on the TOA DIVERSITY WIRELESS TUNER should be illuminated. If not, press the tuner power switch (switch is located on the right side of component). The power indicator light will turn on.
2. The Lapel Microphone and battery pack are located in a gray zip pouch in the bottom of the Audio System wall unit.
3. Plug Lapel Microphone into the belt clip battery pack.
4. Clip Battery pack to your belt.
5. Clip Lapel to your collar or pocket.
6. Press power button on belt pack to use lapel microphone.

***Please note: You cannot use the wireless and lapel microphone at the same time.**

AM/FM STEREO (BOGEN DIGITAL TUNER)

1. If the display is not illuminated on the BOGEN DIGITAL TUNER, press the power switch (switch is located on the left side of the tuner). The display will illuminate.
2. Use the BAND button to toggle between FM Stereo and AM bands. (There are three options for the FM band: FM1, FM2, FM3; and two options for the AM band: AM1, AM2). Each time the BAND button is pressed, the next FM or AM option is displayed.
3. Use the UP and DOWN buttons to move to the next or previous radio station.
4. Use the MSCAN to scan the pre-programmed stations on the selected band option. The scan will automatically stop at the pre-programmed stations for five seconds. To stop the scan, press the MSCAN button again.
5. Use the M1, M2, M3, M4, M5, and M6 buttons to move between preprogrammed stations on the selected band option.

I-Pod/MP3 Player Remote Dock

1. Make sure the MASTER power switch is turned on. When in the ON position the switch will illuminate.
2. Make sure the green LED power light on the TOA AMPLIFIER is illuminated. If it is not, press the amplifier power switch (located on the bottom right of the amplifier).
3. Make sure the BOGEN DIGITAL TUNER IS TURNED OFF.
4. Connect your I-Pod/MP3 player to connection port in the front of the Home Dock Music Remote. The music remote dock is black and located on the bottom shelf of the stereo cabinet. It has a small black remote that is connected to a connection port in the back also.
5. Once your I-Pod/MP3 player is connected to the music remote dock, it will automatically turn on. It will automatically sync the black remote up with the music on your I-pod. Wait for the remote to indicate it is ready to use.
6. Remove the black music remote from music remote dock and select which songs you would like to play.
7. Make sure you use the volume controls on the remote to turn up the volume when you start playback. You need to have the volume turned up on the ipod dock to hear the music through the stereo system.
8. **You must leave your I-pod connected the music remote dock at all times to play music.**
9. **You must use the remote to select the songs you want to play.**
10. To turn off music, place the black remote dock in the connection port on the back of the remote dock.
11. Remove your I-pod.

